



VTR

Broadcast Products Technical Bulletin 20-2009-124

DATE: July 20, 2009

SUBJECT: REPLACING VTR START BUTTON

MODEL:

DNW-7
DNW-7 / 1
DNW-7 / 2
DNW-7P
DNW-7P / IC
DNW-7P / IC0
DNW-7P / 1
DNW-7P / 2
DNW-90
DNW-90 / 1
DNW-90P
DNW-90P / 1
DNW-90WS
DNW-90WS / 1
DNW-90WS / CB
DNW-90WSP
DNW-90WSP / 1
DNW-9WS
DNW-9WS / CB
DNW-9WSP
DVW-700
DVW-700 / 1
DVW-700 / 2
DVW-700P
DVW-700P
DVW-700P / 1
DVW-700P / 2
DVW-700WS
DVW-700WS / 1
DVW-700WS / 2
DVW-700WSP
DVW-700WSP / 1
DVW-700WSP / 2
DVW-707P
DVW-709WS
DVW-709WSP
DVW-790WS
DVW-790WSP
DVW-970
DVW-970 / 1
DVW-970 / 2

DESCRIPTION

The rubber VTR start button may deteriorate over time, depending on the operating environment.

Replace the VTR start button with a new button every three years or when the button is hard to press.

NOTE: When replacing the VTR start button, apply adhesive (LOCTITE 408 or equivalent) to the circumference of the flange from the back. Make sure the adhesive does not spread to the front.

PARTS REQUIRED

Part No.	Description	Qty.
3-986-632-02	VTR Start Button	1

ORDERING INFORMATION

To order parts online, go to: <http://www.sony.com/servicesplus>. For service or parts ordering assistance, refer to the following document, which lists all contact telephone numbers:

Technical Bulletin 00-1999-000

DNWM08-007, DVWM08-015, HDVM08-112
MSWM08-015, PDWM08-053

MODEL: DVW-970P
 DVW-970P/1
 DVW-970P/2
 HDW-650
 HDW-650F
 HDW-650P
 HDW-700
 HDW-730
 HDW-730/2
 HDW-730/3
 HDW-730/4
 HDW-730S
 HDW-730S/2
 HDW-730S/3
 HDW-730S/4
 HDW-750
 HDW-750/1
 HDW-750/2
 HDW-750/3
 HDW-750/4
 HDW-750/9E
 HDW-750/9E1
 HDW-750/9E10
 HDW-750/9E2
 HDW-750/9E3
 HDW-750CE
 HDW-750P
 HDW-750P/1
 HDW-750P/2
 HDW-750P/3
 HDW-750PC
 HDW-750PC/1
 HDW-750PC/2
 HDW-790
 HDW-790P
 HDW-F900
 HDW-F900/1
 HDW-F900/2
 HDW-F900/3
 HDW-F900/30
 HDW-F900H
 HDW-F900H/0
 HDW-F900R
 MSW-900
 MSW-900P
 MSW-900P/9SN
 MSW-930P
 MSW-930P/1
 MSW-930P/2
 MSW-930P/3
 MSW-970
 MSW-970/1
 MSW-970/2
 MSW-970P
 MSW-970P/1

MODEL: MSW-970P/2
 PDW-510
 PDW-510/1
 PDW-510/2
 PDW-510/3
 PDW-510P
 PDW-510P//C
 PDW-510P//C1
 PDW-510P//C2
 PDW-510P//U
 PDW-510P/1
 PDW-510P/2
 PDW-510P/3
 PDW-530
 PDW-530/1
 PDW-530/2
 PDW-530/3
 PDW-530P
 PDW-530P//C
 PDW-530P//C1
 PDW-530P//C2
 PDW-530P//U
 PDW-530P/1
 PDW-530P/2
 PDW-530P/3
 PDW-539P
 PDW-539P
 PDW-700
 PDW-700//U
 PDW-700/1

SERIAL NO:

DNW-7	All
DNW-7/1	All
DNW-7/2	All
DNW-7P	All
<i>DNW-7P//C</i>	<i>All</i>
<i>DNW-7P//C0</i>	<i>All</i>
DNW-7P/1	All
DNW-7P/2	All
DNW-90	All
DNW-90/1	All
DNW-90P	All
DNW-90P/1	All
DNW-90WS	All
DNW-90WS/1	All
DNW-90WS/CB	All
DNW-90WSP	All
DNW-90WSP/1	All
DNW-9WS	All
DNW-9WS/CB	All
DNW-9WSP	All
DVW-700	All
DVW-700/1	All
DVW-700/2	All
<i>DVW-700P</i>	<i>All</i>
DVW-700P	All
DVW-700P/1	All
DVW-700P/2	All
DVW-700WS	All
DVW-700WS/1	All
DVW-700WS/2	All
DVW-700WSP	All
DVW-700WSP/1	All
DVW-700WSP/2	All
DVW-707P	40,576–40,856
DVW-709WS	10,246–10,330
DVW-709WSP	40,651–40,853
DVW-790WS	10,492–10,731
DVW-790WSP	41,461–42,326
DVW-970	All
DVW-970/1	All
DVW-970/2	All
DVW-970P	All

SERIAL NO:

DVW-970P/1	All
DVW-970P/2	All
HDW-650	All
HDW-650F	All
HDW-650P	All
HDW-700	All
HDW-730	All
HDW-730/2	All
HDW-730/3	All
HDW-730/4	All
HDW-730S	All
HDW-730S/2	All
HDW-730S/3	All
HDW-730S/4	All
HDW-750	All
HDW-750/1	All
HDW-750/2	All
HDW-750/3	All
HDW-750/4	All
HDW-750/9E	All
HDW-750/9E1	All
HDW-750/9E10	All
HDW-750/9E2	All
HDW-750/9E3	All
HDW-750CE	All
HDW-750P	All
HDW-750P/1	All
HDW-750P/2	All
HDW-750P/3	All
HDW-750PC	All
HDW-750PC/1	All
HDW-750PC/2	All
HDW-790	All
HDW-790P	All
HDW-F900	All
HDW-F900/1	All
HDW-F900/2	All
HDW-F900/3	All
HDW-F900/30	All
HDW-F900H	All
HDW-F900H/0	All
HDW-F900R	All

SERIAL NO:

MSW-900	All
MSW-900P	All
<i>MSW-900P/9SN</i>	<i>All</i>
<i>MSW-930P</i>	<i>All</i>
<i>MSW-930P/1</i>	<i>All</i>
<i>MSW-930P/2</i>	<i>All</i>
<i>MSW-930P/3</i>	<i>All</i>
MSW-970	All
MSW-970/1	All
MSW-970/2	All
MSW-970P	All
MSW-970P/1	All
MSW-970P/2	All
PDW-510	All
PDW-510/1	All
PDW-510/2	All
PDW-510/3	All
PDW-510P	All
<i>PDW-510P//C</i>	<i>All</i>
<i>PDW-510P//C1</i>	<i>All</i>
<i>PDW-510P//C2</i>	<i>All</i>
<i>PDW-510P//U</i>	<i>All</i>
PDW-510P/1	All
PDW-510P/2	All
PDW-510P/3	All
PDW-530	All
PDW-530/1	All
PDW-530/2	All
PDW-530/3	All
PDW-530P	All
<i>PDW-530P//C</i>	<i>All</i>
<i>PDW-530P//C1</i>	<i>All</i>
<i>PDW-530P//C2</i>	<i>All</i>
<i>PDW-530P//U</i>	<i>All</i>
PDW-530P/1	All
PDW-530P/2	All
PDW-530P/3	All
<i>PDW-539P</i>	<i>All</i>
PDW-539P	All
PDW-700	All
<i>PDW-700//U</i>	<i>All</i>
PDW-700/1	All

Italicized information in green applies to customers outside the United States.